



 
 
 

 


 
 

 
 
 
 
 
 

 
 


 
 


 
 
 
 

 



 









 
 






 



Original	Sustituto
 Power	 Power
 Standby	 +  Shift + Power
 CD	 Smart
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0
 +10 CD	 Guide
 ENT CD	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Sustituto
 Mute	 Mute
 Rec/Disc Skip CD	 Rec
 Pause CD	 Pause
 Play CD	 Play
 >> CD	 >>
 << CD	 <<
 Stop CD	 Stop
 >> CD	 >>
 << CD	 <<
 Sleep	 Sleep
 Display CD	 +  Shift + Info
 Stereo	 List
 Music	 Dual
 Entertain	 Subt
 Movie	 TV/R
 Standard	 Text
 Select	 Options






 







Original	Sustituto
 Exto Sur.	 Format
 Direct ST	 3D
 Speakers	 Red
 Enhancer	 Green
 Night	 Yellow
 Straight	 Blue
 Set Menu	 Menu
 Title/Level/Band	 Media
 Return/Dab	 Back
 Up	 Up
 Down	 Down
 Enter	 Ok
 Right/+	 Right
 Left/-	 Left
 Display	 Info
 *	 AV
 DVR	 D. Menu

Original	Sustituto
 1*	 Shift + 1
 2*	 Shift + 2
 3*	 Shift + 3
 4*	 Shift + 4
 5*	 Shift + 5
 6*	 Shift + 6
 7*	 Shift + 7
 8*	 Shift + 8
 9*	 Shift + 9
 0*	 Shift + 0
 ENT*	 Shift + Pre Ch
 Return/DAB	 Shift + Back
 Menu/Set Menu/Search	 Shift + Menu
 Title/Level/Band*	 Shift + Media
 Display*	 Shift + AV
 Up*	 Shift + Up
 Enter*	 Shift + Ok





 

 



 



 
 
 
 
 

 
 
 
 

 

 

 

 




 
 
 


 
 
 
 

 
 
 

















 

 



Original	Sustituto
 PRESET/CH	Down*  +  Shift + Down
 A/B/C/D/E	Right/+*  +  Shift + Right
 A/B/C/D/E	Left/-*  +  Shift + Left

Original	Sustituto

 
 
 
 

 


 
 




Original		Sustituto		Original		Sustituto	
	Power AV		Shift + AV		Down DVD		Down
	Power		Power		Right/+ DVD		Right
	Standby		Shift + Power		Left/- DVD		Left
	DVD		Smart		Menu/Set Menu/Search		Menu
	Rec/Disc Skip		Rec		Return/DAB Memory DVD		Back
	Pause DVD		Pause		Display DVD		Info
	Play DVD		Play		Title/Level/Band DVD		Media
	Stop DVD		Stop		1 DVD		1
	I<< DVD		I<<		2 DVD		2
	>>I DVD		>>I		3 DVD		3
	<< DVD		<<		4 DVD		4
	>> DVD		>>		5 DVD		5
	Vol+		Vol +		6 DVD		6
	Vol-		Vol -		7 DVD		7
	Mute		Mute		8 DVD		8
	Up DVD		Up		9 DVD		9
	Enter DVD		Ok		0 DVD		0





 

 


 
 
 

 

 



 
 

 
 

 
 

 

 



 




	Original	Sustituto		Sustituto
	+10 DVD		Guide	
	ENT DVD		Pre Ch	
	DTV/CBL		D. Menu	
	V-AUX		AV	
	Sleep		Sleep	

	Original	Sustituto



 

 
 
 


 

 



 

 
 





 
 
 
 

 

 
 


 
 
 

Original	Sustituto
 Power AV	 AV
 Power	 Power
 Standby	 +  Shift + Power
 MD/CD-R	 Smart
 1 MD/CD-R	 1
 2 MD/CD-R	 2
 3 MD/CD-R	 3
 4 MD/CD-R	 4
 5 MD/CD-R	 5
 6 MD/CD-R	 6
 7 MD/CD-R	 7
 8 MD/CD-R	 8
 9 MD/CD-R	 9
 0 MD/CD-R	 0
 +10 MD/CD-R	 Guide
 ENT MD/CD-R	 Pre Ch
 Pause MD/CD-R	 Pause

Original	Sustituto
 Play MD/CD-R	 Play
 >>I MD/CD-R	 >>I
 I<< MD/CD-R	 I<<
 Stop MD/CD-R	 Stop
 << MD/CD-R	 <<
 >> MD/CD-R	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Display	 Info
 Sleep	 Sleep





Original	Sustituto
 Power	 Power
 Standby	 Shift + Power
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Sleep	 Sleep
 Tuner	 Smart
 I<< Tuner	 I<<
 >>I Tuner	 >>I
 << Tuner	 <<
 >> Tuner	 >>
 1 Tuner	 1
 2 Tuner	 2
 3 Tuner	 3
 4 Tuner	 4
 5 Tuner	 5
 6 Tuner	 6

Original	Sustituto
 7 Tuner	 7
 8 Tuner	 8
 9 Tuner	 9
 0 Tuner	 0
 ENT Tuner	 Pre Ch
 Up Tuner	 Up
 Enter Tuner	 Ok
 Down Tuner	 Down
 Right/+ Tuner	 Right
 Left/- Tuner	 Left
 Band Tuner	 Media
 DAB Memory	 Back
 Search Mode	 Menu
 Display Tuner	 Info
 Multi CH In	 D. Menu

