





Original	Sustituto	Original	Sustituto
 Standby	 Power	 I<<	 I<<
 Open / Close	 Eject	 >>I	 >>I
 Scart	 Shift + Media	 Menu	 Menu
 AV	 AV	 DVD	 Smart
 TV	 TV/R	 Up	 Up
 Play / Pause	 Pause	 CH +	 Ch +
 Play / Pause	 Play	 CH -	 Ch -
 Stop	 Stop	 Down	 Down
 Mute	 Mute	 Right	 Right
 Rec	 Rec	 Vol +	 Vol +
 Erase	 Exit	 Left	 Left
 Finalize	 3D	 Vol -	 Vol -
 Rec Mode	 Shift + Rec	 Enter	 Ok
 Pro. Disc	 D. Menu	 Setup	 Options
 Timer	 Shift + AV	 Edit	 Media
 <<	 <<	 1	 1
 >>	 >>	 2	 2





Original	Sustituto
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide
Clear	Shift + Exit
Slow	Shift + Play
Step	Shift + Pause
Sub-T	Subt
Goto	List
Audio	Dual
PAL / NTSC	Shift + Format
Angle	Format

Original	Sustituto
Return	Back
Prog	Sleep
A-B Repeat	Text
Zoom	Shift + Eject
OSD	Info

