






| Original   | Sustituto   |
|--|---|
|  Standby/On           |  Power                 |
|  HDD/DVD              |  Smart / List          |
|  I<</Prev             |  I<< / Preset-         |
|  Pause                |  Pause / Step / Freeze |
|  Stop                 |  Stop / Hold           |
|  >>I/Next             |  >>I / Preset+         |
|  <</II/<I             |  << / Tune-            |
|  Play                 |  Play / Slow           |
|  >>/II>/I>            |  >> / Tune+            |
|  Help                 |  Setup / OPT /         |
|  Rec                 |  Rec / Rec Mode       |
|  Stop Rec           |  Shift + Hold Stop / |
|  Info               |  Info / Angle        |
|  Disc Navigator/Top |  D.Menu / Top        |
|  Home Menu          |  Shift + Home Menu / |
|  Guide              |  Guide / EPG / -/--  |
|  Up                 |  Up                  |

| Original  | Sustituto   |
|---|---|
|  CH+             |  CH+ / Page+                   |
|  CM Back         |  Fav / Marker / PC             |
|  Left            |  Left                          |
|  Enter           |  OK                            |
|  Right           |  Right                         |
|  CH-             |  CH- / Page-                   |
|  CM Skip         |  Zoom / Size                   |
|  ATV/DTV         |  TV/Radio /                    |
|  Down            |  Down                          |
|  Return/Exit     |  Back / Return                 |
|  Red            |  Red / Netflix / Search       |
|  Green         |  Green / APP / Repeat        |
|  Yellow        |  Yellow / YouTube / Repeat   |
|  Blue          |  Blue / Prime Video / Random |
|  Pause Line Tv |  Shift + Pause / Step /      |
|  Timer Rec     |  Sleep / Timer               |
|  Rec Mode      |  Shift + Rec / Rec Mode      |





| Original        | Sustituto            |
|-----------------|----------------------|
| One Touch       | Picture / Format     |
| O)))/Audio      | Audio / Lang I/II    |
| [...] /Subtitle | Subtitle / EQ        |
| Camera/Angle    | Shift + Info / Angle |
| Input Select    | AV / Input / RDS     |
| 1               | 1                    |
| 2               | 2                    |
| 3               | 3                    |
| Menu            | Menu / Home          |
| 4               | 4                    |
| 5               | 5                    |
| 6               | 6                    |
| Display         | Display / Media      |
| 7               | 7                    |
| 8               | 8                    |
| 9               | 9                    |
| +               | Sound / Title        |

| Original                | Sustituto                  |
|-------------------------|----------------------------|
| 0                       | 0                          |
| Clear                   | Exit / Cancel / Clear      |
| Power Tv Control        | Shift + Power              |
| CH+ Tv Control          | Shift + CH+ /              |
| Vol+ Tv Control         | Vol+                       |
| Text                    | Text / Goto                |
| Input Select Tv Control | Shift + AV / Input / RDS   |
| CH- Tv Control          | Shift + CH- /              |
| Vol- Tv Control         | Vol-                       |
| Tv/DVD                  | Shift + TV/Radio / Program |

