

 

 

 

 

 









 


 




 

 





| Original | Sustituto | Original | Sustituto |
|---|--------------------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | -/-- |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Audio/Audio/Lang/ MTS |  | Audio / Lang I/II |
|  | Exit/Exit |  | Exit / Cancel / Clear |

| Original | Sustituto | Original | Sustituto |
|---|--------------|---|---------------------------------|
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | P- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | LCD Menu |  | Shift + D.Menu / Top Menu |
|  | Down |  | Down |
|  | DVB Menu |  | D.Menu / Top |
|  | Input |  | AV / Input / RDS |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Info/Display |  | Info / Angle |
|  | Zoom/P.Ratio |  | Zoom / Size |
|  | Tv/Radio |  | TV/Radio / |



