 






 

 



 





 

 

 

 












Original	Sustituto
 Power Tv	 Power
 Power STB	 Shift + Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Sustituto
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 CH List	 List
 Menu	 Menu
 Smart Hub	 Smart
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





Original	Sustituto	Original	Sustituto
 B	Green	 B	Green
 C	Yellow	 C	Yellow
 D	Blue	 D	Blue
	Search		TV/R
	Status		Media
	More		3D
	E-Manual		D. Menu
	Recommend		Format
	AD/Subt		Subt
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Pause		Pause
	Rec		Rec
	Play		Play
	Stop		Stop

