
 
 
 
 























 




 





Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	Pre-CH
	Vol+
	Mute
	P+

Original	Sustituto
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Text / Goto
	0
	Back / Return
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Sustituto
	Vol-
	CH List
	P-
	Media.P
	Menu
	Guide
	Tools
	Up
	Info
	Left
	Enter
	Right
	Return
	Down
	Exit
	Red
	Green

Original	Sustituto
	Vol-
	Smart / List
	CH- / Page-
	Display / Media
	Menu / Home
	Guide / EPG / -/-
	Setup / OPT /
	Up
	Info / Angle
	Left
	OK
	Right
	Shift + Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat





Original	Sustituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
E-Manual	D.Menu / Top
3D	+  Shift + 3
AD/Subt.	Subtitle / EQ
AD/Subt.	Audio / Lang I/II
Stop	Stop / Hold
<</ <<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>/>>	>> / Tune+

Original	Sustituto

