



Original	Sustituto
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Aspect	Shift + Picture / Format
Recall	Back / Return
TVG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Original	Sustituto
Display	Display / Media
Tv/Radio	TV/Radio /
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol+	Vol+
Vol-	Vol-
Rec	Rec / Rec Mode
CH+	CH+ / Page+
CH-	CH- / Page-
Media	Shift + Display / Media
Source	AV / Input / RDS





Original	Sustituto
P.MODE P.Mode	FORMAT PICTURE Picture / Format
S.MODE S.Mode	TITLE SOUND Sound / Title
SLEEP Sleep	TIMER SLEEP Sleep / Timer
TEXT Text	GOTO TEXT Text / Goto
HOLD Hold	SHIFT + HOLD Shift + Stop /
REVEAL Reveal	TOP MENU D.MENU D.Menu / Top
SUBPAGE Subpage	OPT-TOOLS SETUP Setup / OPT /
TIMESHIFT Play	SLOW Play / Slow
TIMESHIFT Pause/Timeshift	STEP-FREEZE Pause / Step / Freeze
Stop	HOLD Stop / Hold
INDEX Index	ANGLE INFO Info / Angle
SIZE Size	SIZE ZOOM Zoom / Size
<<	TUNE-<< << / Tune-
>>	TUNE+>> >> / Tune+
I<<	PRESET-I<< I<< / Preset-
>>I	PRESET+>>I >>I / Preset+
Red	NETFLIX SEARCH Red / Netflix / Search

Original	Sustituto
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

