

 


 

 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 DTV	 Smart
 Radio	 TV/R
 USB	 3D
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide

Original	Sustituto
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Source	 AV
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Original	Sustituto
 Aspect	 Format
 Sleep	 Sleep
 Subtitle	 Subt
 Audio	 Dual
 Text	 Text
 Text/Hold	 Options
 Text/DVD Zoom	 D. Menu
 Power/Display	 Shift + Power
 Rec/DVD Menu	 Rec
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Eject	 Eject
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause

Original	Sustituto
 Rec List/DVD	 List
 Red/Goto	 Red
 Green/A-B	 Green
 Yellow/Angle/3D	 Yellow
 Blue/Repeat	 Blue

