


 





 

 
 

 


 
 


 
 


 
 

 

 
 
 





Original	Sustituto
 Power Tv	 Power
 NET	 Media
 [i+]	 Info
 FAV	 Shift + Pre Ch
 ATV	 Smart
 DTV	 D. Menu
 SAT	 Shift + Media
 Radio	 TV/R
 Power Source	 Shift + Power
 << Source	 Shift + <<
 Play Source	 Play
 >> Source	 Shift + >>
 USB Rec	 Shift + Rec
 Rec Source	 Rec
 Rec Stop	 Shift + Stop
 Stop Source	 Stop
 Ready/Time Shift	 Options

Original	Sustituto
 ←	 Shift + Left
 →	 Shift + Right
 Pause	 Pause
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Source	 AV
 I/II/I+II/▼/0	 Dual
 [<>]	 Format





Original	Sustituto
AV Mode	Shift + AV
Eco	Shift + 3D
Vol+	Vol +
Vol-	Vol -
Mute	Mute
P+	Ch +
P-	Ch -
[=]	Text
3D	3D
End	Exit
EPG	Guide
Back	Back
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left

Original	Sustituto
OK	Ok
>>	>>
<<	<<
>>	>>
<<	<<
[...]	Subt
[≡?]	List
[≡o]	Sleep
[≡+]	Eject
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

