

 
 
 







 




 
 
 




 

 

 



 
 
 

 



 

 



 

 

 
 
 

 
 
 

 




 








Original		Sustituto		Original		Sustituto	
	Power		Power		Info		Info
	3D		3D		P +		Ch +
	1		1		P -		Ch -
	2		2		W		Shift + Smart
	3		3		Smart TV		Smart
	4		4		@		Media
	5		5		Menu		Menu
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right / Zoom +		Right
	9		9		Left / Zoom -		Left
	0		0		OK		Ok
	ECO		Shift + 3D		Back		Back
	Source		AV		Exit		Exit
	Vol +		Vol +		Option		Options
	Vol -		Vol -		USB		Shift + Media
	Mute		Mute		TV		TV/R



