



 
 
 
 
 
 
 
 

 
 
 
 

 
 
 
 

 
 








 




Original	Sustituto
 Power	 Power
 Drive Select	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 */Delete	 Guide
 Input Select	 AV
 CH+	 Ch +
 CH-	 Ch -
 Create Chapter	 Pre Ch

Original	Sustituto
 Manual Skip	 D. Menu
 >> Slow/Search	 >>
 << Slow/Search	 <<
 >>I Skip	 >>I
 I<< Skip	 I<<
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 i/Status	 Info
 Exit	 Exit
 Option	 Options
 Return	 Back
 Direct Navigator	 List
 Prog/Check	 Sleep
 Function Menu	 Menu
 Up	 Up
 Down	 Down





Original	Sustituto
Right/II>	Right
Left/<II	Left
OK	Ok
Red	Red
Yellow	Yellow
Rec	Rec
Rec Mode	+ Shift + Rec
Green	Green
Blue	Blue
Ext Link	Smart
Audio	Dual
Direct Tv Rec	TV/R
STTL	Subt
Display	+ Shift + Info
Time Slip	3D
Power Tv	+ Shift + Power
Av Tv	Media

Original	Sustituto
Vol+ Tv	Vol +
Vol- Tv	Vol -
CH+ Tv	+ Shift + Ch +
CH- Tv	+ Shift + Ch -

