



Original	Sustituto
Power	Power
Power Tv	+ Shift + Power
AV	AV / Input / RDS
Tv/DVD	TV/Radio /
Open/Close	Eject / Surround
AV Tv	+ Shift + AV / Input / RDS
1	1
2	2
3	3
PR+ Tv	+ Shift + CH+ /
4	4
5	5
6	6
PR- Tv	+ Shift + CH- /
7	7
8	8
9	9

Original	Sustituto
Vol+ Tv	Vol+
Rec	Rec / Rec Mode
0	0
Mute	Mute / Dimmer
Vol- Tv	Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
>>I Skip	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
PR+	CH+ / Page+
Up	Up
Menu/List	D.Menu / Top
Left	Left



