
 

 
 


 




 
 

 


 
 
 
 
 

 




	Original	Sustituto		Original	Sustituto
STEP	Step		Power	ANGLE	Angle
SEARCH	Search		TV/R	AUDIO	Audio
MUTE	Mute		Mute	MENU/PBC	Menu PBC
SOURCE	Source		AV	TITLE	Title
1	1		1		Up
2	2		2	SETUP	Setup
3	3		3		Down
4	4		4		Right
5	5		5		Left
6	6		6	ENTER	Enter
7	7		7	VOL+	Vol+
8	8		8	VOL-	Vol-
9	9		9	MODE	Mode
0	0		0		Stop
10+	10+		Guide		Play
DISPLAY	Display		Info		Pause
SUBTITLE	Subtitle		Subt		>>





	Original	Sustituto		Original	Sustituto
	I<<<		I<<<		
	>>>		>>>		
	<<<		<<<		
	Repeat		Text		
	Slow		3D		
	Program		Sleep		
	Zoom		Eject		

	Original	Sustituto

