


 

 

 
 
 

 
 


 
 


 
 
 






 



 
 


 
 

 









 



 




 




 


 
 



 


 


 

 
 

 
 
 



 
 
 



Original		Sustituto		Original		Sustituto	
	Standby		Power		8		8
	Mute		Mute		9		9
	P.Mode		Shift + Format		0/10		0
	S.Mode		Shift + Dual		-/--/+10		Guide
	Aspect		Format		Recall/Program		Pre Ch
	Sleep		Sleep		Menu		Menu
	TTX		Text		Source		AV
	Index		List		i/Display		Info
	Subtitle		Subt		Exit		Exit
	Audio/I-II		Dual		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH+		Ch +





Original	Sustituto
 CH-	 Ch -
 Red/D.Setup	 Red
 Green/D.Menu	 Green
 Yellow/T.List/Title	 Yellow
 Blue/R.List/D.Display	 Blue
 Open/Close/Mix	 Eject
 Goto/Hold	 Media
 A-B/Reveal	 Options
 Zoom/Size	 Shift + Eject
 Subpage	 Back
 Tv/Radio	 TV/R
 Rec/Repeat	 Rec
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</List	 <<
 >>	 >>

Original	Sustituto
 I<<	 I<<
 >>I/FAV	 >>I

