


Original	Sustituto
 POWER	 Power
 Open / Close	 Eject
 MUTE	 Mute
 DVD / TV Sys	 Smart
 VIDEO	 Media
 TUNER	 Shift + Media
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>	 >>
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play	 Play
 STOP	 Stop

Original	Sustituto
 VOL+	 Vol +
 VOL-	 Vol -
 SETUP	 Options
 PAUSE / Step	 Pause
 Menu/Return	 Menu
 Menu / Return	 Back
 GOTO / Auto	 Guide
 PROGRESSIVE	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Sustituto
0	0
CH-LEVEL	SEARCH TV/R
FM MODE DISPLAY	DISPLAY INFO
REPEAT	REPEAT TEXT
A - B	SHIFT + PLAY MODE
RANDOM / RDS	DISC NAV LIST
SLOW	CH -
SURR. MODE	ECO 3D
EQ	SOUND DUAL
Zoom	SHIFT + ZOOM
SLEEP	PROG SLEEP
Title / PBC	E-MANUAL D.MENU
SUB TITLE/MPX	AD SUBT
AUDIO / PTY	SHIFT + SOUND DUAL
ANGLE	PICTURE FORMAT

Original	Sustituto

