




 

 
 


 

 

 

 

 





 

 

 

 

 







Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Direct Tv Rec	 Eject / Surround
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/Av	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Original	Sustituto
 [=◇]/F.P.	 Shift + Red / Netflix /
 [=i]/Index	 Shift + Green / APP /
 [=+]/Hold	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 i	 Info / Angle
 CH+	 CH+ / Page+
 Vol+	 Vol+





Original	Sustituto
 CH-	 CH- / Page-
 Vol-	 Vol-
 [ + ] / Aspect	 Picture / Format
 N	 Fav / Marker / PC
 Power VCR	 Shift + Mute / Dimmer
 Power DVD	 Shift + Power
 Rec VCR	 Shift + Rec / Rec Mode
 Rec DVD	 Rec / Rec Mode
 Programme-	 Shift + Display / Media
 Programme-	 Display / Media
 Programme+	 Shift + Smart / List
 Programme+	 Smart / List
 <<< / <<< VCR	 Shift + <<< /
 <<< / <<< DVD	 <<< / Preset-
 <<< / <<< DVD	 <<< / Tune-
 <<< / <<< VCR	 Shift + <<< / Preset-
 >>> / >>> VCR	 Shift + >>> /

Tune+

Original	Sustituto
 >> / >> I DVD	 >> / Tune+
 >> / >> I DVD	 >> I / Preset+
 >> / >> I VCR	 Shift + >> I / Preset+
 Stop VCR	 Shift + Stop /
 Stop DVD	 Stop / Hold
 Pause / Step VCR	 Shift + Pause / Step /
 Pause / Step DVD	 Pause / Step / Freeze
 Play VCR	 Shift + Play /
 Play DVD	 Play / Slow

