



 








 


 
 

 
 



 
 


 
 









 



 






 


 
 



 

 

 









Original	Sustituto	Original	Sustituto
	Power		Power
	HDMI Control		D. Menu
	Record		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Internet		Media
	Red/Zoom/↑		Red
	Green/Repeat/↓		Green
	Yellow / Root		Yellow
	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original		Sustituto		Original	Sustituto
	Ok		Ok		
	P/Ch+		Ch +		
	P/Ch-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	Menu		Menu		
	Source		AV		
	Return		Back		
	Epg		Guide		
	Info		Info		
	Sleep		Sleep		
	3D		3D		
	Search Mode		TV/R		
	Music/Movie/Phot		Smart		
	Display		Shift + Info		
	Presets		Options		

