

 

 
 
 
 
 
 






 

 
 


 








 

 





 









 


 







 








Original	Sustituto
 Power	 Power
 Power Tv	 Shift + Power
 Open/Close	 Eject
 Theatre Sync	 Smart
 Tv Input	 AV
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 Display	 Info
 Function	 Options
 Disc Skip	 Media
 Sound Field	 Red
 Movie/Music	 Green
 Dynamic Bass	 Yellow
 Video Format	 Blue
 Audio	 Dual
 Subtitle/D.Tuning	 Subt
 Angle	 Text

Original	Sustituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 System Menu	 Menu
 Muting	 Mute
 Picture Navi	 List
 Vol+	 Vol +
 Vol-	 Vol -
 DVD Menu	 D. Menu





Original	Sustituto
 Menu TV	 Shift + D. Menu
 -/-- Tv	 Guide
 10/0 Tv	 Shift + 0
 Return Tv	 Shift + Back
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 OK	 Ok
 Return	 Back
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 Tv Vol+	 Shift + Vol +
 Tv Vol-	 Shift + Vol -
 Up Tv	 Shift + Up
 Down Tv	 Shift + Down
 Right Tv	 Shift + Right
 Left Tv	 Shift + Left
 []/Display	 3D
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 >>/>/Tuning +	 >>
 <</</Tuning -	 <<
 >>/>/Preset+	 >>
 <</</Preset-	 <<
 OK Tv	 Shift + Ok





Original	Sustituto	Original	Sustituto
	→/Advance/Step I>		Format
	←/Replay/<I Step		TV/R
	DVD Top Menu		Shift + Menu
	Enter Tv		Pre Ch

