







 









 







 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 P Mode	 Format
 S Mode	 Shift + Dual
 Audio I / II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0

Original	Sustituto
 -/-- / +10	 Shift + Guide
 Recall / Program	 Back
 TV Menu	 Menu
 Exit	 Exit
 Goto / Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK / Enter	 Ok
 V -	 Vol -
 V +	 Vol +
 P -	 Ch -
 P +	 Ch +
 Red / DVD	 Red
 Green / A-B	 Green





Original		Sustituto		Original	Sustituto
	Yellow / Angle		Yellow		
	Blue / Repeat		Blue		
	Subtitle		Subt		
	Play / Pause /		Play		
	Size		3D		
	D.Dis / Reveal		Smart		
	D.Menu / Mix		D. Menu		
	Zoom / Index	+	Shift + Eject		
	I<< / Fav		I<<		
	I<< / Fav		Pre Ch		
>>I / Subpage button"/>	>>I / Subpage		>>I		
	Stop / Language		Stop		
	<< / Fav -		<<		
	>> / Fav +		>>		
	Eject / EPG		Guide		
	Eject / EPG		Eject		

