 

 
 
 
 
 
 

 

 
 
 
 
 



 
 
 
 
 

 

 

 








Original	Sustituto
 Power	 Power
 Mute	 Mute
 Picture	 Format
 Sound	 Shift + Dual
 Aspect	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Back

Original	Sustituto
 Menu	 Menu
 Source	 AV
 Exit	 Exit
 [≡i]/Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 USB	 Media
 CH+	 Ch +
 CH-	 Ch -
 EPG	 Shift + Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Green	 Green





Original	Sustituto
Yellow	Yellow
Blue	Blue
<<	<<
>>	>>
I<<	I<<
>>I	>>I
Play	Play
Pause	Pause
Stop	Stop
[=]	Text
[=+]	Smart
[=x]/Repeat	Shift + Text
[=o]/Subtitle	Subt
[=?]/♥	Pre Ch
[=♦]/List	List
OOI/II/Audio	Dual
Rec	Rec

Original	Sustituto
T-Shift	TV/R

