



Original	Sustituto
TEST	Text
1	1
1	1 FM/AM
2	2
2	2 FM/AM
3	3
3	3 FM/AM
EFFECT	Effect
4	4
4	4 FM/AM
5	5
5	5 FM/AM
6	6
6	6 FM/AM
7/P	7/P
7/P	7 FM/AM
8	8

Original	Sustituto
8	8 FM/AM
9	9
9	9 FM/AM
LEVEL	Level- SURR L
LEVEL	Level - SURR R
LEVEL	Level- Center
LEVEL	Level- SUBWFR
LEVEL	Level- Front L
LEVEL	Level- Front R
LEVEL+	Level+ SURR L
LEVEL+	Level+ SURR R
LEVEL+	Level+ Center
LEVEL+	Level+ SUBWFR
LEVEL+	Level+ Front L
LEVEL+	Level+ Front R
10	10/Return
10	10 FM/AM





Original	Sustituto
0	0
+10	Fav / Marker / PC
+10 FM/AM	Shift + 0
Play/TA/News/Info	Shift + Play /
Play FM/AM	Play / Slow
I<</PTY-	Shift + I<< / Preset-
I<<FM/AM	I<< / Preset-
Pause/PTY Search	Shift + Pause / Step / Freeze
Pause FM/AM	Pause / Step / Freeze
>>I/PTY+	Shift + >>I / Preset+
>>I FM/AM	>>I / Preset+
Stop/Display	Shift + Stop /
Stop FM/AM	Stop / Hold
FM/AM	Shift + TV/Radio / Program
FM Mode	TV/Radio /

Original	Sustituto







Original	Sustituto	Original	Sustituto
	Up		Up
	Left		Left
	Right		Right
	Menu		Menu / Home
	Down		Down
	Enter		OK
	Play/TA/News/Info	+	Shift + Play /
	Play VCR		Play / Slow
	I<</PTY-	+	Shift + I<< / Preset-
	I<< VCR		I<< / Preset-
	Pause/PTY Search	+	Shift + Pause / Step /
	Pause VCR		Pause / Step / Freeze
	>>I/PTY+	+	Shift + >>I / Preset+
	>>I VCR		>>I / Preset+
	Rec Pause VCR		Rec / Rec Mode
	Stop/Display		Stop / Hold
	Stop VCR	+	Shift + Stop / Hold

Original	Sustituto





Original	Sustituto
Audio Standby	Audio / Lang I/II
1	1
2	2
3	3
TV Standby	Power
4	4
5	5
6	6
VCR Standby	Shift + Power
7/P	7
DVD Standby	Shift + 2
Play/TA/News/Info	Play / Slow
Sleep	Sleep / Timer
I<</PTY-	I<< / Preset-
Pause/PTY Search	Pause / Step / Freeze
>>I/PTY+	>>I / Preset+
Stop/Display	Stop / Hold

Original	Sustituto
FM/AM	Shift + TV/Radio / Program
VCR	Shift + 4
Analog/Digital	Smart / List
FM/Mode	AV / Input / RDS
Surround	Eject / Surround
DSP	Text / Goto
Surround DSP	Sound / Title
Dimmer	Shift + Mute / Dimmer
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
VCR CH+	Shift + CH+ /
Tv CH+	CH+ / Page+
Tv Vol+	Shift + Vol+
Vol+	Vol+
VCR CH-	Shift + CH- /
Tv CH-	CH- / Page-
Tv Vol-	Shift + Vol-



Mode


 



 

 



 





 









Original	Sustituto	Original	Sustituto





	Original	Sustituto		Sustituto
	1 TV Sound	 1	1	1
	2 TV Sound	 2	2	2
	3 TV Sound	 3	3	3
	4 TV Sound	 4	4	4
	5 TV Sound	 5	5	5
	6 TV Sound	 6	6	6
	7 TV Sound	 7	7	7
	8 TV Sound	 8	8	8
	9 TV Sound	 9	9	9
	10 TV Sound	 Guide / EPG / -/--		
	0 TV Sound	 0	0	0
	+10 TV Sound	 Fav / Marker / PC		
	Play	 Play / Slow		
	I<<	 I<< / Preset-		
	Pause	 Pause / Step / Freeze		
	>>I	 >>I / Preset+		
	Rec Pause	 Rec / Rec Mode		

	Original	Sustituto		Sustituto
	Stop	 Stop / Hold		
	TV Sound	 Sound / Title		

