

 
 






 
 
 


 

 





 

 


 
 
 
 




 





Original	Sustituto
 Power Tv	 Power
 Tv/Video	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10/Tv Return	 Guide
 +10/100+	 Pre Ch
 Vol+	 Vol +

Original	Sustituto
 Vol-	 Vol -
 Muting	 Mute





Original	Sustituto
Power Audio	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10 / Tv Return	Guide
+10 / 100+	Pre Ch
CH+	Ch +
CH-	Ch -
Up	Up
Enter	Ok

Original	Sustituto
Down	Down
Right/Presets Up	Right
Left/Presets Down	Left
Muting	Mute
Menu/PL	Menu
Top Menu/PG	+ Shift + Menu
On Screen	3D
Back / Rec	Rec
Stop / Memory	Stop
Play	Play
Pause/FM Mode	Pause
T<<</Tuning-	T<<<
>>>/Tuning+	>>>
<<</Slow-	<<<
>>>/Slow+	>>>
Audio	Dual
Angle	+ Shift + 3D





Original	Sustituto
ZOOM SUBTITLE	ZOOM Eject
ZOOM SUBTITLE	AD SUBT Subt
TV VOL +	+ VOL Vol +
TV VOL -	- VOL Vol -
REPEAT	REPEAT TEXT Text
PAGE	DISC NAV LIST List
SURROUND	HOME SMART Smart
PTY SEARCH	TIMER AV AV
TA/News/Info	DISPLAY INFO Info
PTY Select-	SHIFT + [Left Arrow] Shift + Left
PTY Select+	SHIFT + [Right Arrow] Shift + Right
LEVEL +	SHIFT + [Up Arrow] Shift + Up
LEVEL -	SHIFT + [Down Arrow] Shift + Down
SLEEP	PROG SLEEP Sleep
RETURN	RETURN BACK Back
DISPLAY	SHIFT + DISPLAY INFO Shift + Info
PLAY MODE	PICTURE FORMAT Format

Original	Sustituto
STB CONT	SHIFT + HOME SMART Shift + Smart
DIMMER	SHIFT + APP MEDIA Shift + Media
USB MEMORY	APP MEDIA Media
CANCEL	CLEAR EXIT Exit
DVD	D Blue
iPod	A Red
FM/AM	B Green
VIDEO VCR CONTROL	C Yellow
TV/VIDEO	SEARCH TV/R TV/R
SET UP	E-MANUAL D.MENU D. Menu
SPK LEVEL	SHIFT + TIMER AV Shift + AV
SETTING	SETTINGS OPT Options
TREBLE/BASS	SHIFT + PROG SLEEP Shift + Sleep
TITLE/GROUP	SHIFT + DISC NAV LIST Shift + List
SCAN MODE VFP	SHIFT + SETTINGS OPT Shift + Options
Tv Sound	SHIFT + SOUND DUAL Shift + Dual





	Original	Sustituto	Original	Sustituto
	Power VCR/STB		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Tv/Video		TV/R	
	CH+		Ch +	
	CH-		Ch -	
	Vol+		Vol +	
	Vol-		Vol -	
	Muting		Mute	

