 

 
 
 
 
 
 


 
 
 
 
 



 
 


 
 
 
 
 
 


 
 
 

 

 
 
 

 
 
 
 


 
 


 
 
 
 
 
 

 
 
 


 
 


 
 




Original		Sustituto		Original		Sustituto	
	Power Receiver		Power		2 Receiver		2
	Enter Receiver		Ok		3 Receiver		3
	Up Receiver		Up		4 Receiver		4
	Down Receiver		Down		5 Receiver		5
	Right Receiver		Right		6 Receiver		6
	Left Receiver		Left		7 Receiver		7
	Return Receiver		Back		8 Receiver		8
	Q/Setup Receiver		Smart		9 Receiver		9
	Home/Audio		Media		0/11 Receiver		0
	Play Receiver		Play		+10/--/--10/Dimmer/D.Tun Receiver		Shift + Guide
	I<< Receiver		I<<		CLR/Sleep/12 Receiver		Pre Ch
	>>I Receiver		>>I		Movie Tv/Red/Search		Red
	<< Receiver		<<		Music/Green/Repeat Receiver		Green
	>> Receiver		>>		Game/Yellow/Random Receiver		Yellow
	Pause Receiver		Pause		Stereo/Blue/Mode Receiver		Blue
	Stop Receiver		Stop		Vol+ Receiver		Vol +
	1 Receiver		1		Vol- Receiver		Vol -





Original		Sustituto		Original		Sustituto	
	CH Disc/Album+ Receiver		Ch +		Yellow Tv		Subt
	CH Disc/Album- Receiver		Ch -		Blue Tv		TV/R
	Power Tv				1 Tv		
	Input Tv		AV		2 Tv		
	CH+ Tv				3 Tv		
	CH- Tv				4 Tv		
	Up Tv				5 Tv		
	Enter Tv				6 Tv		
	Down Tv				7 Tv		
	Right Tv				8 Tv		
	Left Tv				9 Tv		
	Menu/Prev CH		Menu		0/11 Tv		
	Top Menu/Guide				+10/--/--10 Tv		Guide
	Return Tv				CLR/Sleep/12		
	Q/Setup Tv				Vol+ Tv		
	Red Tv		Options		Vol- Tv		
	Green Tv		Dual		AUX		Text





Original	Sustituto	Original	Sustituto
TV/CD	Format		
CBL/SAT	3D		
FM	Shift + Subt		
NET	Shift + Media		
PC	Shift + TV/R		
BD/DVD	Shift + Text		
USB	Shift + AV		









 
 
 
 
 
 
 

 
 

 





 



 





Original	Sustituto	Original	Sustituto
Power BD/DVD	Power	Stop BD/DVD	Stop
Menu/Prev CH	Menu	Movie Tv/Red/Search	Red
Top Menu/Guide BD/DVD	Options	Music/Green/Repe at BD/DVD	Green
Q/Setup	Smart	Game/Yellow/Ran dom BD/DVD	Yellow
Return BD/DVD	Back	Stereo/Blue/Mode BD/DVD	Blue
Home/Audio	Media	1 BD/DVD	1
Enter BD/DVD	Ok	2 BD/DVD	2
Up BD/DVD	Up	3 BD/DVD	3
Down BD/DVD	Down	4 BD/DVD	4
Right BD/DVD	Right	5 BD/DVD	5
Left BD/DVD	Left	6 BD/DVD	6
I<< BD/DVD	I<<	7 BD/DVD	7
>>I BD/DVD	>>I	8 BD/DVD	8
<< BD/DVD	<<	9 BD/DVD	9
>> BD/DVD	>>	0/11 BD/DVD	0
Play BD/DVD	Play	+10/--/10/D.Tun/ Dimmer BD/DVD	Guide
Pause BD/DVD	Pause	CLR/Sleep/12	Pre Ch



BD/DVD



Original	Sustituto
 CBL/SAT	 Text
 Vol+ Receiver	 Vol +
 Vol- Receiver	 Vol -
 Power CBL/SAT	 Shift + Power
 CH Disc/Album+ CBL/SAT	 Ch +
 CH Disc/Album- CBL/SAT	 Ch -
 Menu/Prev CH CBL/SAT	 Shift + Menu
 Top Menu/Guide CBL/SAT	 Shift + Options
 Return CBL/SAT	 Shift + Back
 Q/Setup	 Shift + Smart
 Up CBL/SAT	 Shift + Up
 Enter CBL/SAT	 Shift + Ok
 Down CBL/SAT	 Shift + Down
 Right CBL/SAT	 Shift + Right
 Left CBL/SAT	 Shift + Left
 Pause CBL/SAT	 Shift + Pause
 Stop CBL/SAT	 Shift + Stop

Original	Sustituto
 << CBL/SAT	 Shift + Ch -
 >> CBL/SAT	 Shift + Ch +
 Play CBL/SAT	 3D
 Movie Tv/Red/Search	 Dual
 Music/Green/Repeat at CBL/SAT	 Subt
 Game/Yellow/Random CBL/SAT	 AV
 Stereo/Blue/Mode CBL/SAT	 Format
 1 CBL/SAT	 Shift + 1
 2 CBL/SAT	 Shift + 2
 3 CBL/SAT	 Shift + 3
 4 CBL/SAT	 Shift + 4
 5 CBL/SAT	 Shift + 5
 6 CBL/SAT	 Shift + 6
 7 CBL/SAT	 Shift + 7
 8 CBL/SAT	 Shift + 8
 9 CBL/SAT	 Shift + 9
 0/11 CBL/SAT	 Shift + 0





Original

Sustituto

BD/DVD	BD/DVD	SEARCH TV/R	TV/R

Original

Sustituto





Original	Sustituto	Original	Sustituto
Power TV/CD	Power	Stop TV/CD	Stop
CH/Disc+ TV/CD	Ch +	Movie Tv/Red/Search	Red
CH/Disc TV/CD	Ch -	Music/Green/Repeat TV/CD	Green
Return TV/CD	Back	Game/Yellow/Random TV/CD	Yellow
Q/Setup TV/CD	Smart	Stereo/Blue/Mode TV/CD	Blue
Home/Audio	Media	1 TV/CD	1
Up TV/CD	Up	2 TV/CD	2
Down TV/CD	Down	3 TV/CD	3
Right TV/CD	Right	4 TV/CD	4
Left TV/CD	Left	5 TV/CD	5
Enter TV/CD	Ok	6 TV/CD	6
I<< TV/CD	I<<	7 TV/CD	7
>>I TV/CD	>>I	8 TV/CD	8
<< TV/CD	<<	9 TV/CD	9
>> TV/CD	>>	0/11 TV/CD	0
Play TV/CD	Play	+10/--10/D.Tun/Dimmer TV/CD	Guide
Pause TV/CD	Pause	CLR/Sleep/12	Pre Ch










 



 


 


 
 

 

 
 


 
 


 


 
 
 

 
 


 
 


 
 
 
 


TV/CD



Original	Sustituto	Original	Sustituto
Vol+ Receiver	Vol +		
Vol- Receiver	Vol -		
TV/CD	TV/R		


 
 





	Original	Sustituto		Original	Sustituto
	Power Receiver Zone 2		Power		<< Zone 2
	Vol+ Zone 2		Vol +		Pause Zone 2
	Vol- Zone 2		Vol -		Stop Zone 2
	CH Disc/Album+ Zone 2		Ch +		Movie Tv/Red/Search
	CH Disc/Album- Zone 2		Ch -		Music/Green/Repeat at Zone 2
	Up Zone 2		Up		Game/Yellow/Random Zone 2
	Enter Zone 2		Ok		Stereo/Blue/Mode Zone 2
	Down Zone 2		Down		1 Zone 2
	Right Zone 2		Right		2 Zone 2
	Left Zone 2		Left		3 Zone 2
	Return Zone 2		Back		4 Zone 2
	Q/Setup Zone 2		Smart		5 Zone 2
	Home/Audio Zone		Media		6 Zone 2
	I<< Zone 2		I<<		7 Zone 2
	>>I Zone 2		>>I		8 Zone 2
	Play Zone 2		Play		9 Zone 2
	>> Zone 2		>>		0/11 Zone 2





	Original	Sustituto
	+10/--/--10/D.Tun/ Dimmer Zone 2	 Guide
	CLR/Sleep/12	 Pre Ch

	Original	Sustituto

