

































| Original    | Sustituto              |
|-------------|------------------------|
| Power       | Power                  |
| Volume -    | Vol-                   |
| Volume +    | Vol+                   |
| DAT/Video   | 4                      |
| Phono       | 2                      |
| CD Direct   | 3                      |
| Surround    | Eject / Surround       |
| < Deck I    | Left                   |
| > Deck I    | Right                  |
| < Deck II   | Shift + Left           |
| > Deck II   | Shift + Right          |
| << Deck I   | Down                   |
| >> Deck I   | Up                     |
| << Deck II  | Shift + Down           |
| >> Deck II  | Shift + Up             |
| Stop Deck I | OK                     |
| Rec Deck II | Shift + Rec / Rec Mode |

| Original         | Sustituto                     |
|------------------|-------------------------------|
| Pause Deck II    | Shift + Pause / Step / Freeze |
| Stop Deck II     | Shift + OK                    |
| Tuner Station -  | << / Tune-                    |
| Tuner Station +  | >> / Tune+                    |
| Disc CD          | D.Menu / Top                  |
| Play CD          | Play / Slow                   |
| I<< Track/Search | I<< / Preset-                 |
| >>I Track/Search | >>I / Preset+                 |
| GEQ On/Off       | Subtitle / EQ                 |
| GEQ Select       | Sound / Title                 |
| Pause CD         | Pause / Step / Freeze         |
| Stop CD          | Stop / Hold                   |
| Sleep            | Sleep / Timer                 |
| Wake-Up          | Smart / List                  |
| Snooze           | Display / Media               |





| Original  | Sustituto  |
|---|--|
|  Power         |  Power                    |
|  Volume -      |  Vol-                     |
|  Volume +      |  Vol+                     |
|  DAT/Video     |  4                        |
|  Phono         |  2                        |
|  CD Direct     |  3                        |
|  Surround      |  Eject / Surround         |
|  < Deck I      |  Left                     |
|  > Deck I      |  Right                    |
|  < Deck II     |  Shift + Left             |
|  > Deck II    |  Shift + Right           |
|  << Deck I   |  Down                   |
|  >> Deck I   |  Up                     |
|  << Deck II  |  Shift + Down           |
|  >> Deck II  |  Shift + Up             |
|  Stop Deck I |  OK                     |
|  Rec Deck II |  Shift + Rec / Rec Mode |

| Original   | Sustituto  |
|--|--|
|  Pause Deck II    |  Shift + Pause / Step / |
|  Stop Deck II     |  Shift + OK             |
|  Tuner Station -  |  << / Tune-             |
|  Tuner Station +  |  >> / Tune+             |
|  Disc CD          |  D.Menu / Top           |
|  Play CD          |  Play / Slow            |
|  I<< Track/Search |  I<< / Preset-          |
|  >>I Track/Search |  >>I / Preset+          |
|  GEQ On/Off       |  Subtitle / EQ          |
|  GEQ Select       |  Sound / Title          |
|  Pause CD        |  Pause / Step / Freeze |
|  Stop CD        |  Stop / Hold          |
|  Sleep          |  Sleep / Timer        |
|  Wake-Up        |  Smart / List         |
|  Snooze         |  Display / Media      |

