 

 



 







 

 

 

 

 

 

 

 

 







Original	Sustituto
 Power	 Power
 Energy/Saving	 Eject / Surround
 TV/Radio	 TV/Radio /
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Ratio	 Picture / Format
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 List	 Smart / List
 Settings	 Menu / Home
 Q.View	 Display / Media
 Q.Menu	 D.Menu / Top
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 FAV	 Fav / Marker / PC
 AD	 Audio / Lang I/II
 P+	 CH+ / Page+





	Original	Sustituto	Original	Sustituto
	P-	CH- / Page-		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Subtitle	Subtitle / EQ		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Text	Text / Goto		
	T.Opt	Setup / OPT /		

