



| Original | Sustituto | Original | Sustituto |
|------------|-------------------|-------------|----------------------------|
| Power | Power | -/-- | Shift + Guide / EPG / -/-- |
| Mute | Mute / Dimmer | Jump | Smart / List |
| Source | AV / Input / RDS | Menu | Menu / Home |
| P.Mode | Picture / Format | Info | Info / Angle |
| S.Mode | Sound / Title | Sleep | Sleep / Timer |
| I/II/Audio | Audio / Lang I/II | Exit | Exit / Cancel / Clear |
| P.Size | Zoom / Size | Up | Up |
| 1 | 1 | Left | Left |
| 2 | 2 | Enter | OK |
| 3 | 3 | Right | Right |
| 4 | 4 | Down | Down |
| 5 | 5 | Vol+ | Vol+ |
| 6 | 6 | Vol- | Vol- |
| 7 | 7 | P- | CH- / Page- |
| 8 | 8 | P+ | CH+ / Page+ |
| 9 | 9 | Red/D.Setup | Red / Netflix / Search |
| 0 | 0 | Red/D.Setup | Setup / OPT / |





| Original | Sustituto |
|------------------------|-----------------------------|
| REPEAT Green/Repeat | Green / APP / Repeat |
| ZOOM Yellow/Zoom | Yellow / YouTube / Repeat |
| ZOOM Yellow/Zoom | Shift + Zoom / |
| GOTO Blue/Goto | Blue / Prime Video / Random |
| GOTO Blue/Goto | Shift + Text / |
| FAV.CH [≡i]/FAV.CH | Fav / Marker / PC |
| [≡?]/Freeze | Shift + Pause / Step / |
| [≡♦]/USB/SD | Shift + 8 |
| [≡+]/Tv/Radio | TV/Radio / |
| Rec | Rec / Rec Mode |
| Stop | Stop / Hold |
| Open/Close | Eject / Surround |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |

| Original | Sustituto |
|----------|-------------------|
| >>I | >>I / Preset+ |
| DVD Menu | D.Menu / Top |
| Text | Text / Goto |
| Subtitle | Subtitle / EQ |
| Guide | Guide / EPG / -/- |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

