
 
 


 



















Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	P.Size		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Jump		Smart / List
	Menu		Menu / Home
	Info		Info / Angle
	Sleep		Sleep / Timer
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	P-		CH- / Page-
	P+		CH+ / Page+
	Red/D.Setup		Red / Netflix / Search
	Red/D.Setup		Setup / OPT /





Original	Sustituto
 Green/Repeat	 Green / APP / Repeat
 Yellow/Zoom	 Yellow / YouTube / Repeat
 Yellow/Zoom	 +  Shift + Zoom /
 Blue/Goto	 Blue / Prime Video / Random
 Blue/Goto	 +  Shift + Text /
 [≡i]/FAV.CH	 Fav / Marker / PC
 [≡?]/Freeze	 +  Shift + Pause / Step /
 [≡♦]/USB/SD	 +  Shift + 8
 [≡+]/Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Open/Close	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-

Original	Sustituto
 >>I	 >>I / Preset+
 DVD Menu	 D.Menu / Top
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Guide	 Guide / EPG / -/-

