



Original	Sustituto	Original	Sustituto
Power	Power	-/--	Shift + Guide / EPG / -/--
Mute	Mute / Dimmer	Jump	Smart / List
Source	AV / Input / RDS	Menu	Menu / Home
P.Mode	Picture / Format	Info	Info / Angle
S.Mode	Sound / Title	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
P.Size	Zoom / Size	Up	Up
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Down	Down
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	P-	CH- / Page-
8	8	P+	CH+ / Page+
9	9	Red/D.Setup	Red / Netflix / Search
0	0	Red/D.Setup	Setup / OPT /





	Original	Sustituto
	Green/Repeat	Green / APP / Repeat
	Yellow/Zoom	Yellow / YouTube / Repeat
	Yellow/Zoom	Shift + Zoom /
	Blue/Goto	Blue / Prime Video / Random
	Blue/Goto	Shift + Text /
	[≡i]/FAV.CH	Fav / Marker / PC
	[≡?]/Freeze	Shift + Pause / Step /
	[≡♦]/USB/SD	Shift + 8
	[≡+]/Tv/Radio	TV/Radio /
	Rec	Rec / Rec Mode
	Stop	Stop / Hold
	Open/Close	Eject / Surround
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	<<	<< / Tune-
	>>	>> / Tune+
	I<<	I<< / Preset-

	Original	Sustituto
	>>I	>>I / Preset+
	DVD Menu	D.Menu / Top
	Text	Text / Goto
	Subtitle	Subtitle / EQ
	Guide	Guide / EPG / -/-

