





 


 

 

 


 
 
 



 

 


 









 





 
 

 
 

 
 
 




 

 
 
 











 







 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 




Original	Sustituto	Original	Sustituto
	Power		Power
	DS		Media
	Tv/Source		AV
	Wide		Format
	Mute		Mute
	D/A / P↔P		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/[≡]		Shift + Guide
	CS		Smart
	[Y]/[≡?]		Exit
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu/[≡i]		Menu
	Return/[≡x]		Back
	Info		Info
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok




 
 


 



 







 








Original	Sustituto	Original	Sustituto
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Pause		Pause
	Power Down		Shift + Power
	Stop		Stop
	Play		Play
	<<		<<
	>>		>>
	Surround		Dual
	Bass		Options
	→←		3D
	▼/A/B		List
	Subtitle		Subt
	[≡◆]		TV/R
	[≡+]		D. Menu
	TXT/TV		Text





Original	Sustituto	Original	Sustituto
 Power Down	 Power		
 Menu/[≡i]	 Menu		
 Enter	 Ok		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Pause	 Pause		
 Stop	 Stop		
 Play	 Play		
 Prev	 I<<		
 Next	 >>I		

