 
 


 


 


 
 
 




 



 
 
 

 
 
 
 

 

 
















 







Original		Sustituto		Original		Sustituto	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Eco		3D
	Input HEOS		6		Mute		Mute
	Input Internet Radio		7		Volume +		Vol +
	Input CBL/SAT		8		Volume -		Vol -
	Input DVD		9		Info		Info
	Input Blu-ray		Guide		Option		Options
	Input Aux1		0		Setup		Menu
	Input Game		Pre Ch		Back		Back
	Input Aux2		Shift + Smart		Back		Exit
	Input Media		Media		Up		Up
	Input CD		Smart		Down		Down
	Quick Select 1		D. Menu		Right		Right



 
 

 
 






 






Original	Sustituto	Original	Sustituto
	Left		Left
	Enter		Ok
	I<< / Tune -		I<<
	Play		Play
	>>I / Tune +		>>I
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Green / Sound Mode Movie		Green
	Red / Sound Mode Music		Red
	Blue / Sound Mode Game		Blue
	Yellow / Sound Mode Pure		Yellow
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5
	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0
	Enter		Shift + Pre Ch
	Sleep		Sleep






 

 


 




 





 
 
 






Original		Sustituto		Original		Sustituto	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Mute		Mute
	Input HEOS		6		Volume +		Vol +
	Input Internet Radio		7		Volume -		Vol -
	Input CBL/SAT		8		Up		Up
	Input DVD		9		Down		Down
	Input Blu-ray		Guide		Right		Right
	Input Aux1		0		Left		Left
	Input Game		Pre Ch		Enter		Ok
	Input Aux2		Shift + Smart		Back		Back
	Input Media		Media		Back		Exit
	Input CD		Smart		I<< / Tune -		I<<
	Quick Select 1		D. Menu		Play		Play





Original	Sustituto
 >> / Tune +	 >>
 <<	 <<
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 1	 +  Shift + 1
 2	 +  Shift + 2
 3	 +  Shift + 3
 4	 +  Shift + 4
 5	 +  Shift + 5
 6	 +  Shift + 6
 7	 +  Shift + 7
 8	 +  Shift + 8
 9	 +  Shift + 9
 0	 +  Shift + 0
 Enter	 +  +  Shift + Pre Ch
 Sleep	 +  Sleep

Original	Sustituto




 










Original	Sustituto
Quick Select 1	D. Menu
Enter	+ Shift + Pre Ch
Quick Select 4	AV
Quick Select 3	Eject
Quick Select 2	Text
Power	Power
Input TV Audio	1
Input Tuner	2
Input Bluetooth	3
Input Phono	4
Input USB	5
Input HEOS	6
Input Internet Radio	7
Input CBL/SAT	8
Input DVD	9
Input Blu-ray	Guide
Input Aux1	0

Original	Sustituto
Input Game	Pre Ch
Input Aux2	+ Shift + Smart
Input Media	Media
Input CD	Smart
CH + / Page +	Ch +
CH - / Page -	Ch -
Mute	Mute
Volume +	Vol +
Volume -	Vol -
Up	Up
Down	Down
Right	Right
Back	Exit
Left	Left
Enter	Ok
Back	Back
I<< / Tune -	I<<





	Original	Sustituto		Sustituto
	Play	 Play		
	>>I / Tune +			
	<<			
	Pause	 Pause		
	1	 +  Shift + 1		
	2	 +  Shift + 2		
	3	 +  Shift + 3		
	4	 +  Shift + 4		
	5	 +  Shift + 5		
	6	 +  Shift + 6		
	7	 +  Shift + 7		
	8	 +  Shift + 8		
	9	 +  Shift + 9		
	0	 +  Shift + 0		
	Stop	 Stop		
	>>			
	Sleep	 Sleep		

Original	Sustituto

