
 


 

 
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 1	1
 1	 1	 2	2
 2	 2	 3	3
 3	 3	 4	4
 4	 4	 5	5
 5	 5	 6	6
 6	 6	 7	7
 7	 7	 8	8
 8	 8	 9	9
 9	 9	 0	0
TV/VCR	TV/R	AD-SKIP	Guide
AD-SKIP	Guide	Rec/OTR	Rec
Rec/OTR	Rec	Eject	Eject
Eject	Eject	Play	Play
Play	Play	>>/F.FWD	>>
>>/F.FWD	>>		

 
 

 
 

Original	Sustituto	Original	Sustituto
 <</REW	 <<	 Pause/Still	Pause
 Pause/Still	 Pause	 Stop	Stop
 Stop	 Stop	 Channel/Tracking	Ch +
 Channel/Tracking	 Ch +	 Channel/Tracking-	Ch -
 Channel/Tracking-	 Ch -	 Up	Up
 Up	 Up	 Down	Down
 Down	 Down	 Right	Right
 Right	 Right	 Left	Left
 Left	 Left	 OK/CLK/CNT	Ok
 OK/CLK/CNT	 Ok	Clear	Exit
Clear	Exit	i/Menu	Menu
i/Menu	Menu	Speed	Smart
Speed	Smart	AV	AV
AV	AV	Rec End Search	3D
Rec End Search	3D	Child Lock	Media
Child Lock	Media	VISS	Options
VISS	Options		





**Original**

**Sustituto**

	A-TR		Dual
	Zero/Back		Back
	OTPB		Info

**Original**

**Sustituto**