



Original	Sustituto	Original	Sustituto
Guide	Guide / EPG / --		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search		D.Setup
Green/Angle	Green / APP / Repeat		Rec
Yellow/Repeat	Yellow / YouTube / Repeat		Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto		Menu / Home
Freeze/Hold	Shift + Pause / Step /		Lang/Audio
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Sustituto	Original	Sustituto
	Play / Slow		Play / Slow
	Pause / Step / Freeze		Pause / Step / Freeze
	<< / Tune-		<< / Tune-
	>> / Tune+		>> / Tune+
	Setup / OPT /		Setup / OPT /
	Rec / Rec Mode		Rec / Rec Mode
	Stop / Hold		Stop / Hold
	I<< / Preset-		I<< / Preset-
	>>I / Preset+		>>I / Preset+
	Menu / Home		Menu / Home
	Audio / Lang I/II		Audio / Lang I/II
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Sleep / Timer		Sleep / Timer
	Down		Down





Original	Sustituto
	EXIT / Cancel / Clear
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + GUIDE EPG / -/--

Original	Sustituto
	0
	Back / Return
	AV / Input / RDS
	Picture / Format
	Sound / Title

