















 



 




 


 
 






















 









 



 











Original	Sustituto	Original	Sustituto
Guide	 Guide / EPG / --	 Play	 Play / Slow
 Power	 Power	 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red/Goto	 Red / Netflix / Search	 D.Setup	 Setup / OPT /
 Green/Angle	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Repeat	 Yellow / YouTube / Repeat	 Stop	 Stop / Hold
 Blue/A-B	 Blue / Prime Video / Random	 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC	 >>I/Index	 >>I / Preset+
 Text	 Text / Goto	 Menu	 Menu / Home
 Freeze/Hold	 +  Shift + Pause / Step /	 Lang/Audio	 Audio / Lang I/II
 D.Menu	 D.Menu / Top	 Up	 Up
 Subtitle	 Subtitle / EQ	 Left	 Left
 Zoom/Size	 Zoom / Size	 OK	 OK
 Aspect	 +  Shift + Picture / Format	 Right	 Right
 Subpage	 Info / Angle	 Sleep	 Sleep / Timer
 Media	 +  Shift + Display / Media	 Down	 Down

Original	Sustituto	Original	Sustituto
Guide	 Guide / EPG / --	 Play	 Play / Slow
 Power	 Power	 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround	 <<	 << / Tune-
 Tv/Radio	 TV/Radio /	 >>	 >> / Tune+
 Red/Goto	 Red / Netflix / Search	 D.Setup	 Setup / OPT /
 Green/Angle	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Repeat	 Yellow / YouTube / Repeat	 Stop	 Stop / Hold
 Blue/A-B	 Blue / Prime Video / Random	 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC	 >>I/Index	 >>I / Preset+
 Text	 Text / Goto	 Menu	 Menu / Home
 Freeze/Hold	 +  Shift + Pause / Step /	 Lang/Audio	 Audio / Lang I/II
 D.Menu	 D.Menu / Top	 Up	 Up
 Subtitle	 Subtitle / EQ	 Left	 Left
 Zoom/Size	 Zoom / Size	 OK	 OK
 Aspect	 +  Shift + Picture / Format	 Right	 Right
 Subpage	 Info / Angle	 Sleep	 Sleep / Timer
 Media	 +  Shift + Display / Media	 Down	 Down





Original	Sustituto
	Exit / Cancel / Clear
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	+  Shift + Guide / EPG / -/--

Original	Sustituto
	0
	Back / Return
	AV / Input / RDS
	Picture / Format
	Sound / Title

