






 

 

 

 
 
 




 
 







 




Original	Sustituto
 Power	 Power
 P/I Scan	 Media
 P/N	 Blue
 Open/Close	 Eject
 Prog	 Sleep
 Subtitle	 Subt
 Angle	 Red
 Language	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 0	 0
 10+	 Guide
 Goto	 Pre Ch
 Setup	 Options
 Menu	 Menu
 Zoom	 Shift + Eject
 Repeat	 Text
 Display	 Info
 A-B	 List
 Title	 3D
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 R/L	 TV/R
 PBC	 Format





Original	Sustituto	Original	Sustituto
Step	AV		
Return	Back		
Slow	Smart		
Resume	D. Menu		
Vol+	Vol +		
Vol-	Vol -		
Mute	Mute		
<<	<<		
>>	>>		
I<<	I<<		
>>I	>>I		
Stop	Stop		
Play	Play		
Pause	Pause		

