





































Original	Sustituto
 Power	 Power
 Energy	 Display / Media
 Picture	 Picture / Format
 Sound	 Sound / Title
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 16:9/4:3	 Shift + Zoom /
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 TTX	 Text / Goto
 0	 0
 Recall	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Home	 Shift + Menu /
 EPG/Hold	 Guide / EPG / -/-
 CH+	 CH+ / Page+





Original		Sustituto		Original		Sustituto	
	Vol-		Vol-		Blue		Blue / Prime Video / Random
	FAV List		Fav / Marker / PC				
	Size		Zoom / Size				
	Play		Smart / List				
	CH-		CH- / Page-				
	Play		Play / Slow				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Tv Pause		Pause / Step / Freeze				
	Goto		Shift + Text /				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Rec		Rec / Rec Mode				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				

