


 


 
 


 

 
 
 
 
 


 



 




Original	Sustituto
 Power	 Power
 Picture	 Format
 Input Tv	 TV/R
 Input AV	 AV
 Menu	 Menu
 Text	 Text
 STTL	 Subt
 APPS	 Media
 i	 Info
 Exit	 Exit
 Netflix	 Shift + Media
 Home	 Smart
 Guide	 Guide
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Sustituto		Original		Sustituto	
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	?/eHelp		3D				
	Last View		Pre Ch				
	<<		<<				
	Play		Play				
	>>		>>				
	I<<		I<<				
	Pause		Pause				
	>>I		>>I				
	Stop		Stop				
	Rec		Rec				
	My APP		Shift + Smart				

