







 



 












 

 









Original	Sustituto
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Format / Picture / Format
	 Res. / D.Menu / Top
	 TTX / GOTO / Text
	 S-T / TITLE / Sound
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold

Original	Sustituto
	 Rec / Rec Mode
	 PVR List / Smart / List
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 OK
	 Right
	 EPG / Guide / EPG / -/-
	 Down
	 Info / Angle
	 CH+ / Page+
	 CH- / Page-
	 Tv/Rad / TV/Radio /
	 Vol+
	 Vol-
	 Audio / Audio / Lang I/II





Original		Sustituto	
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
0	0	HDMI - BAT	0
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
↔	Recall	RETURN BACK	Back / Return

Original		Sustituto	

