



| Original         | Sustituto                |
|------------------|--------------------------|
| Standby          | Power                    |
| AQT/Auto/Open/CI | Eject / Surround         |
| P.Mode           | Picture / Format         |
| S.Mode           | Sound / Title            |
| List/Angle       | Smart / List             |
| Aspect           | Shift + Picture / Format |
| 1                | 1                        |
| 2                | 2                        |
| 3                | 3                        |
| 4                | 4                        |
| 5                | 5                        |
| 6                | 6                        |
| 7                | 7                        |
| 8                | 8                        |
| 9                | 9                        |
| 0                | 0                        |
| Back             | Back / Return            |

| Original  | Sustituto             |
|-----------|-----------------------|
| Vol+      | Vol+                  |
| Mute      | Mute / Dimmer         |
| CH+       | CH+ / Page+           |
| Vol-      | Vol-                  |
| Audio     | Audio / Lang I/II     |
| CH-       | CH- / Page-           |
| Sub-T     | Subtitle / EQ         |
| Menu      | Menu / Home           |
| [i+]/Info | Info / Angle          |
| Input     | AV / Input / RDS      |
| Up        | Up                    |
| Left      | Left                  |
| OK        | OK                    |
| Right     | Right                 |
| Down      | Down                  |
| Exit      | Exit / Cancel / Clear |
| DVD Setup | Shift + 2             |



