





Original	Sustituto
Sleep	Sleep / Timer
Power	Power
HDMI 1	1
HDMI 2	2
HDMI 3	3
HDMI 4	4
HDMI 5	5
HDMI 6	6
AV 1	Shift + 1
AV 2	Shift + 2
AV 3	Shift + 3
AV 4	Shift + 4
AV 5	Shift + 5
AV 6	Shift + 6
Zone A	Guide / EPG / -/--
Zone B	Fav / Marker / PC
AUX	7

Original	Sustituto
USB	8
NET	9
FM	CH+ / Page+
AM	CH- / Page-
Preset Up	Shift + >>I / Preset+
Tuning Up	Shift + >> /
Info	Info / Angle
Memory	Smart / List
Preset Down	Shift + I<< / Preset-
Tuning Down	Shift + << /
Movie	Picture / Format
Music	Sound / Title
Sur.Decode	Eject / Surround
Straight	Audio / Lang I/II
Bass	Zoom / Size
Enhancer	Subtitle / EQ
Direct	TV/Radio /





Original	Sustituto
 Scene BD/DVD	 Red / Netflix / Search
 Scene TV	 Green / APP / Repeat
 Scene NET	 Yellow / YouTube / Repeat
 Scene Radio	 Blue / Prime Video / Random
 Setup	 Setup / OPT /
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Volume+	 Vol+
 Left	 Left
 Enter	 OK
 Right	 Right
 Volume-	 Vol-
 Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 Top Menu	 D.Menu / Top
 Pop-Up Menu	 Menu / Home

Original	Sustituto
 Mute	 Mute / Dimmer
 Mode	 Text / Goto
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+

