







 

 
 
 
 
 

 
 
 

 













 
 


 






 
 

 
 
 



 
 







Original	Sustituto
 Standby/On	 Power
 VCR Eject	 Shift + Eject
 DVD/VCR	 Red
 DVD	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer Rec	 Guide
 Input Select	 AV
 Show View	 3D

Original	Sustituto
 Return	 Back
 Cancel	 Exit
 Title Menu/Top	 Menu
 DVD Menu	 D. Menu
 Setup	 Options
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right/TRK+	 Right
 Left/TRK-	 Left
 Enter	 Ok
 Stop	 Stop
 Play	 Play
 Pause/Still	 Pause
 I<</Skip/Index-	 I<<
 <</Rew/Search	 <<





Original	Sustituto
>>/F.FWD/Search	>>
>>/I/Skip/Index	>>I
One Touch	Text
CM Skip	Yellow
I> Slow	Blue
Rec	Rec
Rec Mode	SHIFT + Rec
Dubbing	Format
Audio/Audio	Dual
Display	Info
Zoom	SHIFT + 3D
Repeat A-B	SHIFT + Text
Zero Return	SHIFT + Back
Counter	Smart
Subtitle/ATR	Subt
Play Mode/Repeat	SHIFT + Play
Clock/Counter	SHIFT + Dual

Original	Sustituto
Tv/Video	TV/R
Progressive	List

