



Original	Sustituto
	Mute / Dimmer
	Power
	Text / Goto
	Subtitle / EQ
	Shift + Menu /
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	I<< / Preset-
	0

Original	Sustituto
	>>I / Preset+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	Vol+
	Exit / Cancel / Clear
	CH+ / Page+
	Vol-
	Guide / EPG / -/--
	CH- / Page-
	Menu / Home





	Original	Sustituto	Original	Sustituto
	[≡R]	Eject / Surround		
	Audio	Audio / Lang I/II		
	Help	D.Menu / Top		
	<<	<< / Tune-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	TV	Shift + 1		
	TV	TV/Radio /		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Radio	Shift + 6		
	Radio	Shift + TV/Radio / Program		

