


 
 












 

 

 







 




 




 

 
 


 




 









 











Original		Sustituto		Original		Sustituto	
	Standby		Power		Up		Up
	Mute		Mute		Down		Down
	PN		Smart		Right		Right
	Open/Close		Eject		Left		Left
	<<		<<		OK		Ok
	>>		>>		Vol+		Vol +
	Play		Play		Vol-		Vol -
	Pause		Pause		1		1
	Stop		Stop		2		2
	I<<		I<<		3		3
	>>I		>>I		4		4
	Setup		Menu		5		5
	Source		AV		6		6
	Info		Info		7		7
	Return/Exit		Back		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0





Original	Sustituto	Original	Sustituto
 Slow	 Media		
 Goto	 Options		
 Program	 Sleep		
 Title/TTX	 Text		
 Audio	 Dual		
 Subtitle	 Subt		
 Red/Repeat	 Red		
 Green/A-B	 Green		
 Yellow/Menu	 Yellow		
 Blue/Angle	 Blue		
 EPG	 Guide		
 Favorite	 Pre Ch		
 Tv/Radio	 TV/R		
 Record	 Rec		

Original	Sustituto

