





 

 







Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/FAV	 0
 AV	 AV
 Mute	 Mute
 List	 List
 Exit	 Exit
 i	 Info
 Swap	 Pre Ch

Original	Sustituto
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red/PVR	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 EPG	 Guide
 TXT	 Text
 Option	 Options
 <<	 <<
 Play	 Play
 >>	 >>
 Skip R	 I<<
 Pause/Timeshift	 Pause





Original		Sustituto	
	Skip F		>>I
	Rec		Rec
	Stop/Live		Stop
	Timer	+ +	Shift + AV
	Files		Subt
	TV		TV/R
	Radio		Dual
	Format		Format
	Menu		Menu

Original		Sustituto	

