







 

 
 
 

 




 









Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PR.List	 List
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Pic.Mode	 Shift + Format

Original	Sustituto
 S.Mode	 Shift + Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Exit	 Exit
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Zoom	 Eject
 Sleep	 Sleep
 Rec	 Rec
 Rec List	 Smart
 Red	 Red
 Green	 Green





Original	Sustituto	Original	Sustituto
	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
	Tv/Radio		TV/R
	I/II/Audio		Dual
	Subtitle		Subt
	Index		Media
	Reveal		Format
	ATV/DTV		Options
	Info		Info
	Text		Text
	Play/Size		Play
	Pause/Subpage		Pause
	Stop/Hold		Stop
	I<<		I<<
	>>I		>>I
	<<		<<

