


















 




| Original   | Sustituto   |
|--|---|
|  Standby        |  Power             |
|  Mute           |  Mute / Dimmer     |
|  1              |  1                 |
|  2              |  2                 |
|  3              |  3                 |
|  4              |  4                 |
|  5              |  5                 |
|  6              |  6                 |
|  7              |  7                 |
|  8             |  8                |
|  9            |  9               |
|  Recall       |  Back / Return   |
|  0            |  0               |
|  List         |  Smart / List    |
|  Vol+         |  Vol+            |
|  Info/Display |  Display / Media |
|  Info/Display |  Info / Angle    |

| Original  | Sustituto   |
|---|---|
|  CH+         |  CH+ / Page+                 |
|  Vol-        |  Vol-                        |
|  Zoom/Aspect |  Shift + Zoom /              |
|  Zoom/Aspect |  Picture / Format            |
|  CH-         |  CH- / Page-                 |
|  Menu        |  Menu / Home                 |
|  Up          |  Up                          |
|  Exit        |  Exit / Cancel / Clear       |
|  Left        |  Left                        |
|  OK/Enter   |  OK                         |
|  Right     |  Right                     |
|  Sleep     |  Sleep / Timer             |
|  Down      |  Down                      |
|  Source    |  AV / Input / RDS          |
|  Red       |  Red / Netflix / Search    |
|  Green     |  Green / APP / Repeat      |
|  Yellow    |  Yellow / YouTube / Repeat |



