



 











 






 

 
 
 


 







 

 


 






Original	Sustituto
Power	Power
Power Tv	+  Shift + Power
DVD	+  Shift + 2
HDD	+  Shift + 7
Open/Close	Eject / Surround
Av/Input Tv	+  Shift + AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	+  Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	+  Shift + CH- /
7	7
8	8
9	9

Original	Sustituto
Vol+ Tv	Vol+
Dubbing	Setup / OPT /
0	0
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
PR/CH+	CH+ / Page+
Menu/List	D.Menu / Top
Menu/List	Smart / List





Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 PR/CH-	 CH- / Page-
 Return	 Back / Return
 Timeshift	 Info / Angle
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 CHP.ADD	 Text / Goto
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Title	 Sound / Title
 Thumbnail	 Picture / Format
 Zoom	 Zoom / Size
 Marker	 Fav / Marker / PC

Original	Sustituto
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Tv/DVD	 TV/Radio /
 *	 Guide / EPG / -/--

