 


 



 
 



 
 





 





 




 




 

 











 



 


















 




Original	Sustituto	Original	Sustituto
 Power Audio	 Power	 9	 9
 Power Tv	 +  Shift + Power	 0	 0
 Bluetooth Setting	 Smart	 10	 Guide
 Rec Mode	 Rec	 >10	 Pre Ch
 Title Search	 +  Shift + TV/R	 10	 Sleep
 Tv/Video	 TV/R	 0	 Media
 Eco Dimmer	 3D	 Tv Channel +	 Ch +
 Display/Chara	 Info	 >10	 AV
 Title Edit	 D. Menu	 Tv Channel -	 Ch -
 1/Marc	 1	 Tv Vol+	 +  Shift + Vol +
 2	 2	 Tv Vol-	 +  Shift + Vol -
 3	 3	 Return	 Back
 4	 4	 Top Menu/PG	 +  Shift + Menu
 5	 5	 Menu/PL	 Menu
 6	 6	 Audio Vol+	 Vol +
 7	 7	 Audio Vol-	 Vol -
 8	 8	 Cancel	 Exit





Original	Sustituto	Original	Sustituto
Fade Muting	Mute	Tuner/Play	Shift + Play
On Screen	Shift + Info	Play/Pause	Red
Up	Up	Play/Pause	Green
Down	Down	Play/Pause	Yellow
Right	Right	Play/Pause Bluetooth	Blue
Left	Left	Audio/MPX	Dual
Enter/Set	Ok	Subtitle	Subt
Stop	Stop	Zoom	Eject
Play	Play	FM/AM/Audio In	Format
Pause	Pause	File Type	Shift + Subt
I<<	I<<	Angle	List
I>>	I>>	Set Up	Options
I<< Group/Title Skip	Shift + I<<	VFP/Scan Mode	Shift + 1
I>> Group/Title Skip	Shift + I>>	3D Phonic/HP Surr	Shift + 2
<<	<<	C.Voice	Shift + Mute
>>	>>	DVD/Audio In	Shift + 3
>> Group/Title	Shift + >>	Sound Mode	Shift + Dual





