


 



 
 




 
 
 
 


 

 





 













 



 


 




 

 
 
 



 



 

 



 


 





Original		Sustituto		Original		Sustituto	
	Power		Power		Back		Back
	[≡i]/Info		Info		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		List		List
	0		0		Sleep		Sleep
	[≡?]/Source		AV		EPG		Guide
	OOI/II/Audio		Dual		♥/FAV		Pre Ch
	Menu		Menu		Red		Red
	[≡♦]/[++]		3D		Green		Green





	Original	Sustituto	Original	Sustituto
	Yellow	 C		Yellow
	Blue	 D		Blue
	<<			<<
	>>			>>
	<<			<<
	>>			>>
	Play			Play
	Pause			Pause
	Stop			Stop
	[≡]			Text
	Time Shift			Media
	[≡o]			Format
	Radio			TV/R
	[≡x]			Subt
	DMP			Options
	Index			Smart
	Rec			Rec

