




 







 

 


 

 
 
 
 
 

 

 

 
 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 Recall / Mouse	 Back
 P.Mode	 Format
 S.Mode	 Dual
 Nicam / A2	 Shift + Dual

Original	Sustituto
 Sleep	 Sleep
 Source	 AV
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Info	 Info
 Home	 Smart
 FAV	 Pre Ch
 Settings	 Options
 ASP	 List
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu





Original		Sustituto	
	Exit		Exit
	I<< / Text		I<<
	I<< / Text		Text
	>>I / Subpage	>>I button"/>	>>I
	<< / Size		<<
	>> / Reveal		>>
	Play/Pause / Index		Play
	Play/Pause / Index		Pause
	Stop / Hold		Stop
	Cancel		Shift + Exit
	Subtitle		Subt
	Repeat		Shift + Text
	Auto		3D
	A - B		Eject
	Media		Media
	Red		Red
	Green		Green

Original		Sustituto	
	Yellow		Yellow
	Blue		Blue

