

 
 

 

 
 
 


 

 



 
 


 



 

 



 
 
 
 


 
 
 

 
 
 

 
 
 
 
 
 

 
 
 

 



 
 









Original	Sustituto	Original	Sustituto
 Power	 Power	 Audio	 Dual
 Open / Close	 Eject	 Clear	 Exit
 HDD	 Smart	 Red	 Red
 DVD	 Media	 Green / Subtitle	 Green
 Prog +	 Ch +	 Green / Subtitle	 Subt
 Prog -	 Ch -	 Yellow / Angle	 Yellow
 Input	 AV	 Yellow / Angle	 Format
 1	 1	 Blue / Play Mode	 Blue
 2	 2	 Blue / Play Mode	 Shift + Play
 3	 3	 System Menu	 D. Menu
 4	 4	 Title List / Top Menu	 Shift + Menu
 5	 5	 Title List / Top Menu	 List
 6	 6	 Guide	 Guide
 7	 7	 Menu	 Menu
 8	 8	 TV / DVD	 TV/R
 9	 9	 Info	 Info
 0	 0	 Up	 Up





Original	Sustituto
Right	Right
Down	Down
Left	Left
Enter	Ok
Return	Back
	+
Display	Shift + Info
I<< / Page -	I<<
	+
<·	Shift + Left
	+
·>	Shift + Right
>>I / Page +	>>I
<< / Day - / <I / <II	<<
Play	Play
>> / Day + / I> / II>	>>
	+
TV Pause	Shift + Pause
Pause	Pause
Stop	Stop
Rec	Rec

Original	Sustituto
	+
Rec Stop	Shift + Stop
	+
DUB HDD/DVD	Shift + Smart
	+
Rec Mode	Shift + Rec
TV Vol +	Vol +
TV Vol -	Vol -
	+
TV Prog +	Shift + Ch +
	+
TV Prog -	Shift + Ch -
	+
TV Power	Shift + Power
	+
TV Input	Shift + AV

